

# Signature Planning Panels


## - Installation Guide

### STEP 1: Mark Hole Positions



Position panel with spirit level. Mark center points of each mounting hole with a pencil.

### STEP 2: Drill the Holes

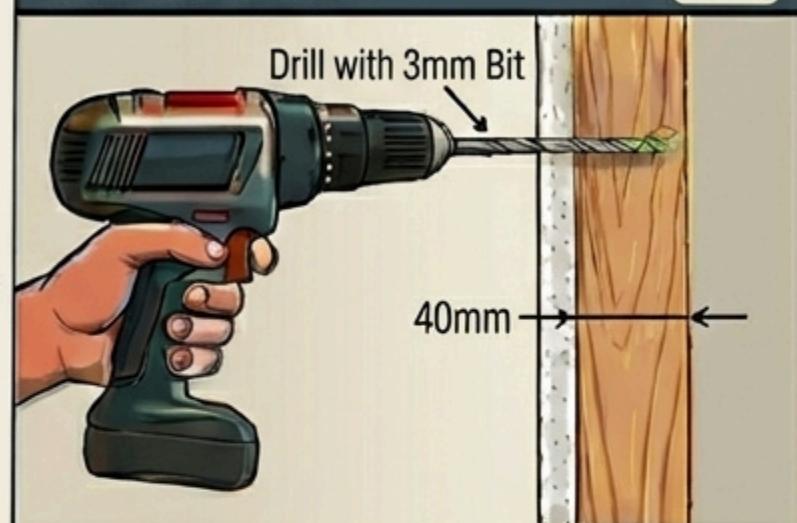

Remove panel. Drill holes at marked positions. For studs, ensure 40mm depth.

### STEP 3: Install Wall Anchors (Non-Stud)



For holes with no studs behind them, gently tap the provided plasterboard anchors into place using a hammer.

### STEP 4: Attech the Panel



Screw in each cap base. (Hand tighten the last bit) and then screw on each mount cap.

### TOOLS REQUIRED:



Drill with  
3mm Bit



Hammer



Pencil



Ruler



Spllit Level



Screwdriver